
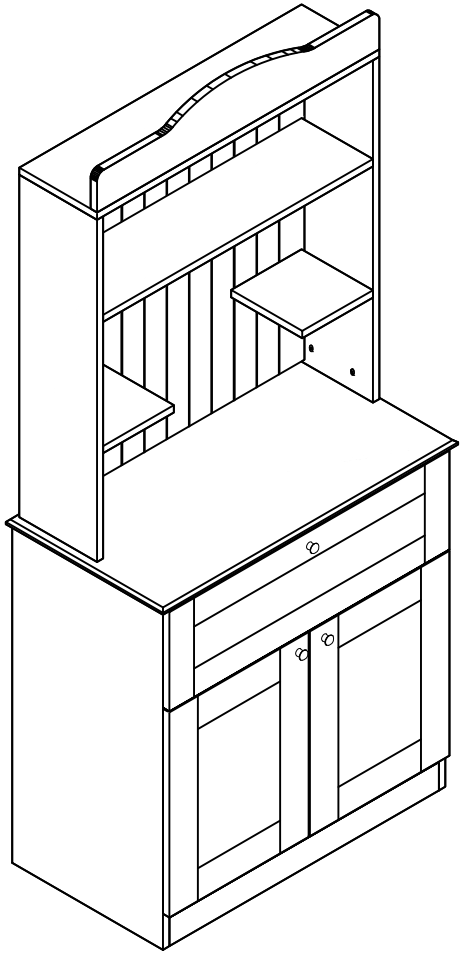


LUCAS 2-DOOR DRAWER COFFEE CORNER AND MULTI-PURPOSE KITCHEN CABINET

Dear Customer,

The first page of the assembly diagram contains lists of furniture parts and accessories. Before starting the assembly, please check the furniture parts and accessories you have. If there are any missing parts or accessories, you can contact us through our support line..

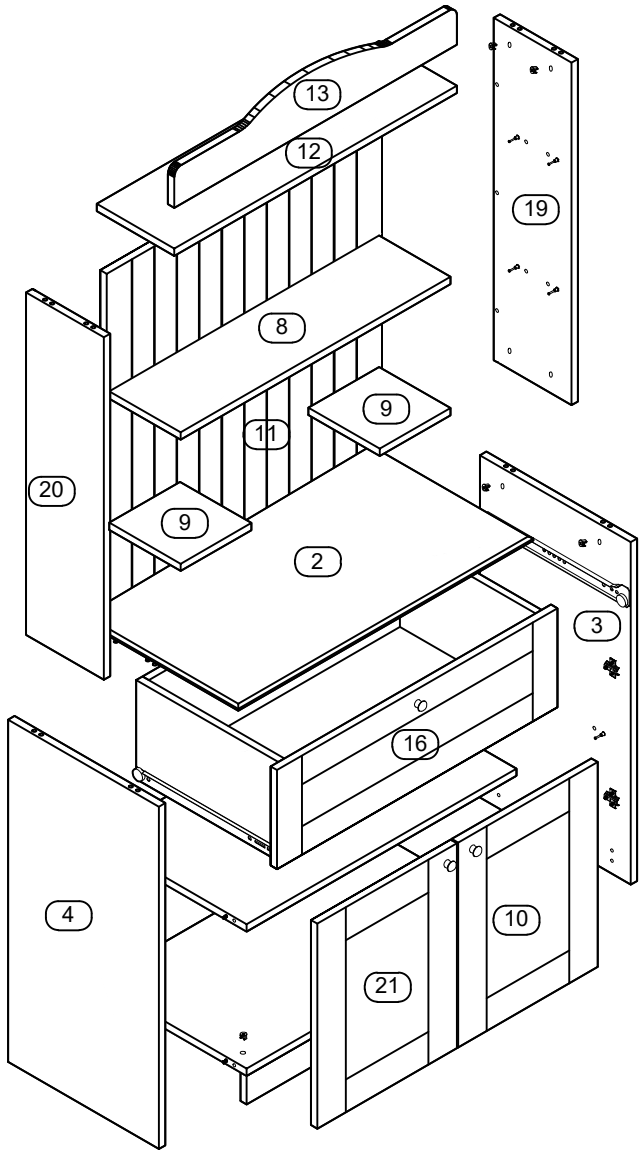

DİKKAT! / PAY ATTENTION!
Lütfen kuruluma başlamadan önce aşağıda verilen aksesuar listesini kontrol ediniz.
Please check the accessory list below before starting the installation.


MOBİLYA AKSESUAR LİSTESİ / FURNITURE ACCESSORY LIST

Kod Code	A
MİNİFİX MİLİ FIX SCREW	
Adt. Piece	48

Kod Code	B
MİNİFİX GÖVDE MİNİFİX LOCK	
Adt. Piece	49


Kod Code	C
MİNİFİX TAPA FIX PLUG	
Adt. Piece	49

Kod Code	D
Ø8mm PLS. KAVELA Ø8mm PLS. DOWEL	
Adt. Piece	43

Kod Code	H2
DÜZ MENTEŞE FLAT HINGE	
Adt. Piece	4

Kod Code	L
ÇEKMECE RAY TAKIMI DRAWER RAIL SET	
Adt. Piece	1Tk.

Kod Code	E
3,5*18 SUNTA VİDASI 3,5*18 CHIPBOARD SCREW	
Adt. Piece	28

Kod Code	KP
KULP HANDLE	
Adt. Piece	3

Kod Code	J
KULP VİDASI HANDLE SCREW	
Adt. Piece	3


Kod Code	C1
3 CM PIECE NAILS WITHOUT BASE	
Adt. Piece	20

Kod Code	G
5*50 CABIN SCREW	
Adt. Piece	9


Kod Code	KNC
KANCALI VİDA	
Adt. Piece	5


KOD / CODE	PARÇA ADI / COMPONENT NAME	ADET
1	ALT PANEL / LOWER TABLE	1
2	ÜST PANEL (TEZGAH) / TOP TABLE	1
3	SAĞ YAN PANEL / RIGHT SIDE TABLE	1
4	SOL YAN PANEL / LEFT SIDE TABLE	1
5	ARKALIK (DÜZ RENK) / BACKREST (SOLID)	2
6	BAZA / BASE	2
7	DOLAP İÇİ SABİT RAF / FLOATING SHELF	1
8	TEZGAH ÜSTÜ SABİT RAF / FLOATING SHELF	2
9	TEZGAH ÜSTÜ KONSOL RAF / CONSOLE SHELF	2
10	SAĞ KAPAK / RIGHT COVER	1
11	ARKALIK (ÇİZGİLİ) / BACKREST (STRIPED)	1
12	ÜST PANEL (DAR)	1
13	ÜST PANEL (ALIN)	1
14	ÇEKMECE SOL YAN	1
15	ÇEKMECE SAĞ YAN	1
16	ÇEKMECE ÖN YÜZ	1
17	ÇEKMECE ALT TABLA	1
18	ÇEKMECE ARKA	1
19	TEZGAH ÜSTÜ SAĞ YAN	1
20	TEZGAH ÜSTÜ SOL YAN	1
21	SOL KAPAK/LEFT COVER	1

Step 1: Place the minifix shafts and dowels on the bottom surface of the base panel as shown in the diagram. Align the holes in the base pieces with the minifix shafts and dowels. Insert and secure the minifix bodies into the holes on the inner surface of the base pieces as shown in the diagram.

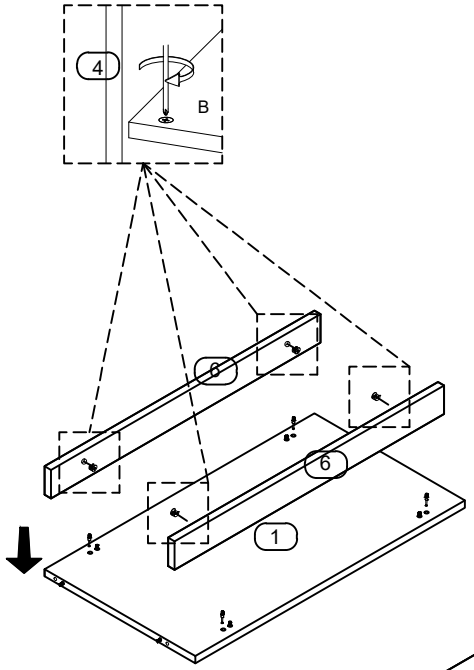


Step 2: Turn the bottom panel over. Insert the dowels into the side panels of the bottom panel and the base as shown in the diagram.

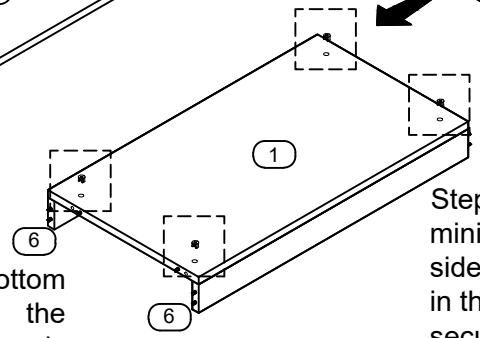


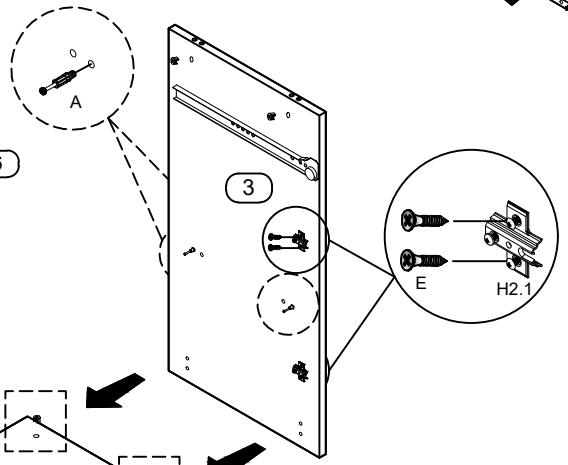


Step 3: Insert the minifix bolts into the side panels as shown in the diagram. Then secure the hinge bases as shown in the diagram.

Step 5: Insert the dowels into the side surfaces of the shelf panels as shown in the diagram, and place the minifix connectors on the bottom surface of the shelf panels.

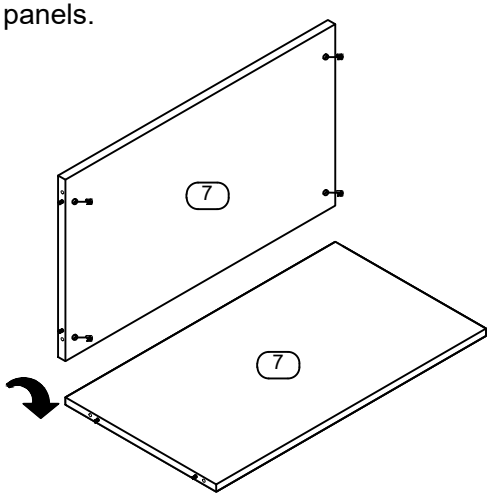


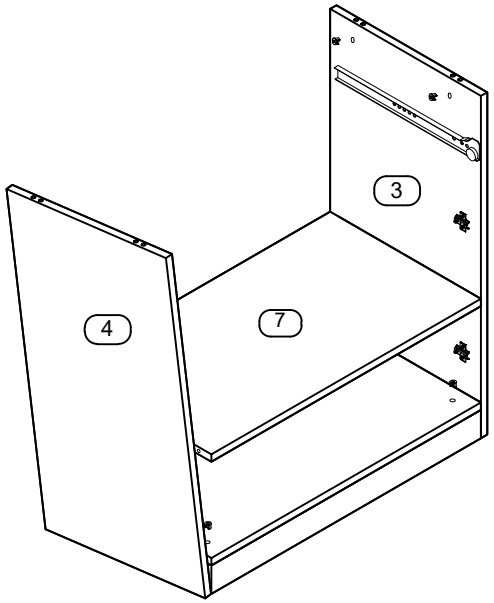


Step 6: Place and secure the fasteners to the top panel (workbench) as shown in the diagram.

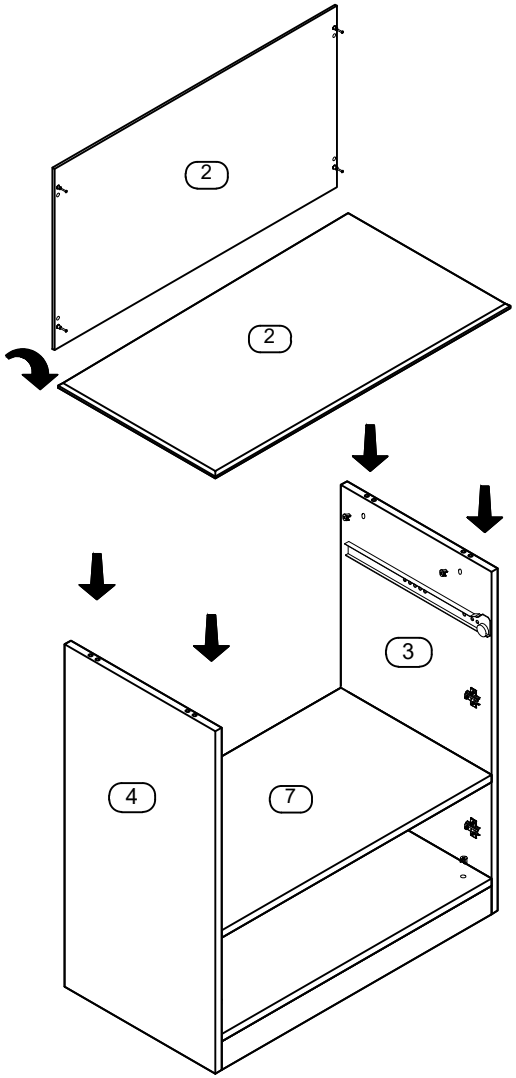


Step 7: Place the backrest of your furniture and secure it as shown in the diagram.

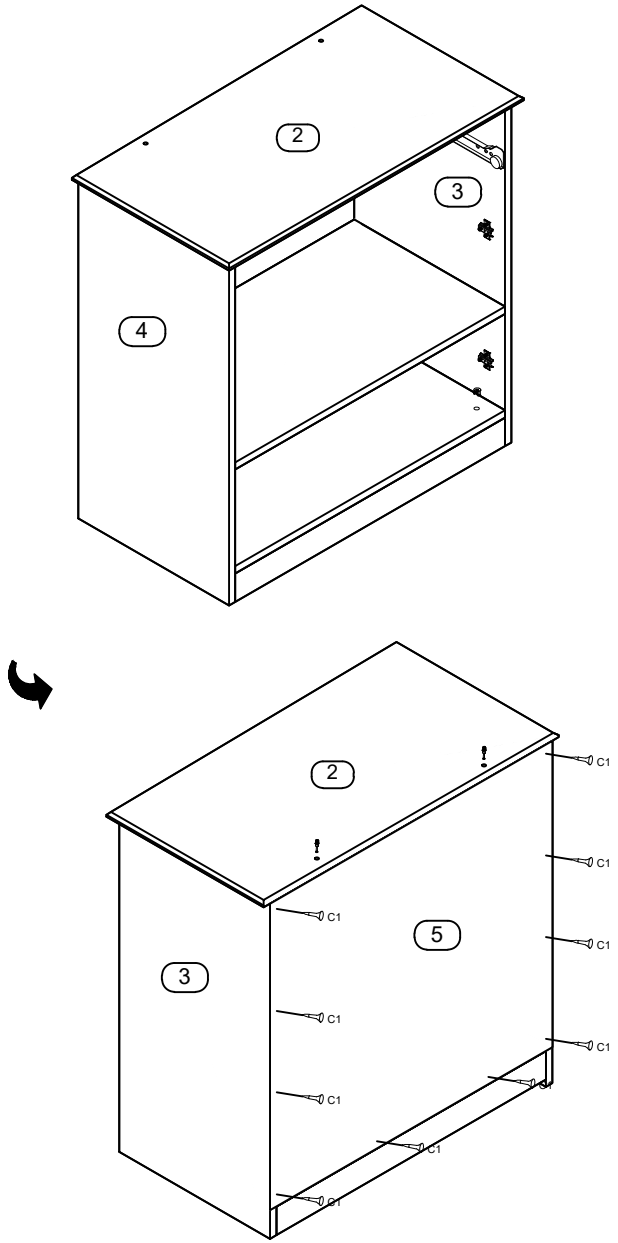


Step 8: Install the minifix bolts into the workbench side panels as shown in the diagram.

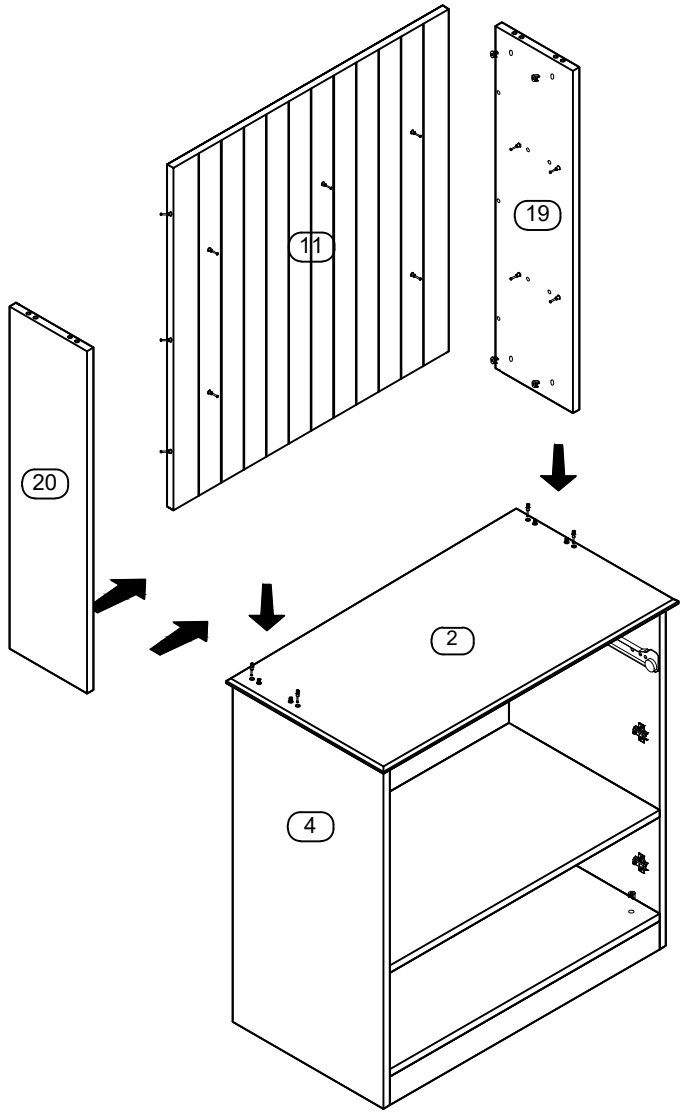


Step 9: Fold the right and left side panels of the countertop and install the fixed shelf panel #8.

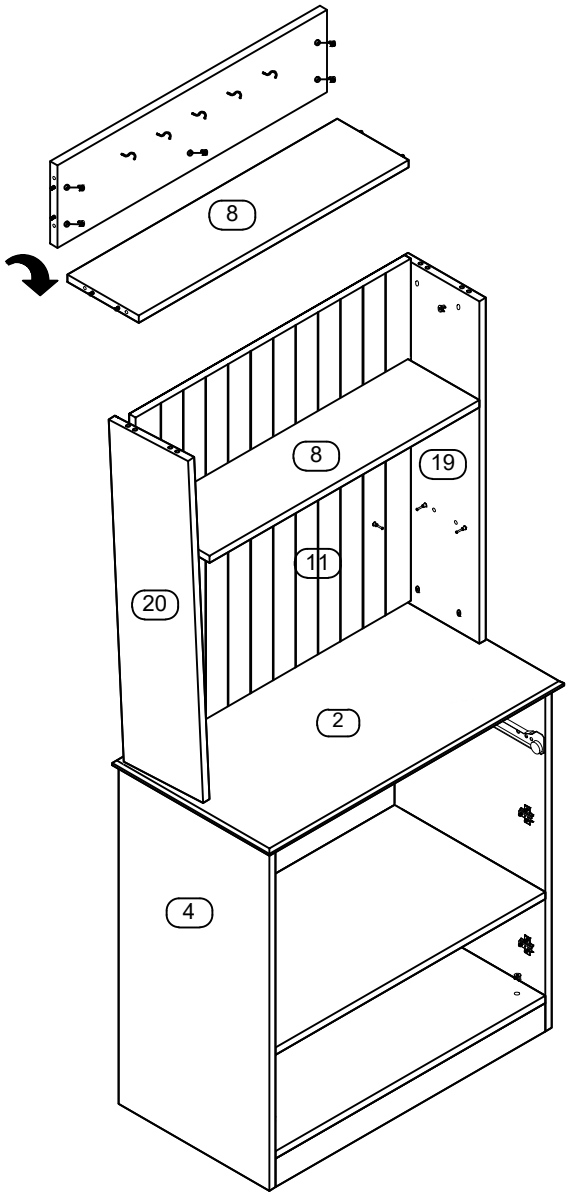


Step 10: Install and secure the #9 cantilever shelf modules. It is important to ensure the cantilever shelves are facing correctly. The parts without edge banding should remain on the inside.

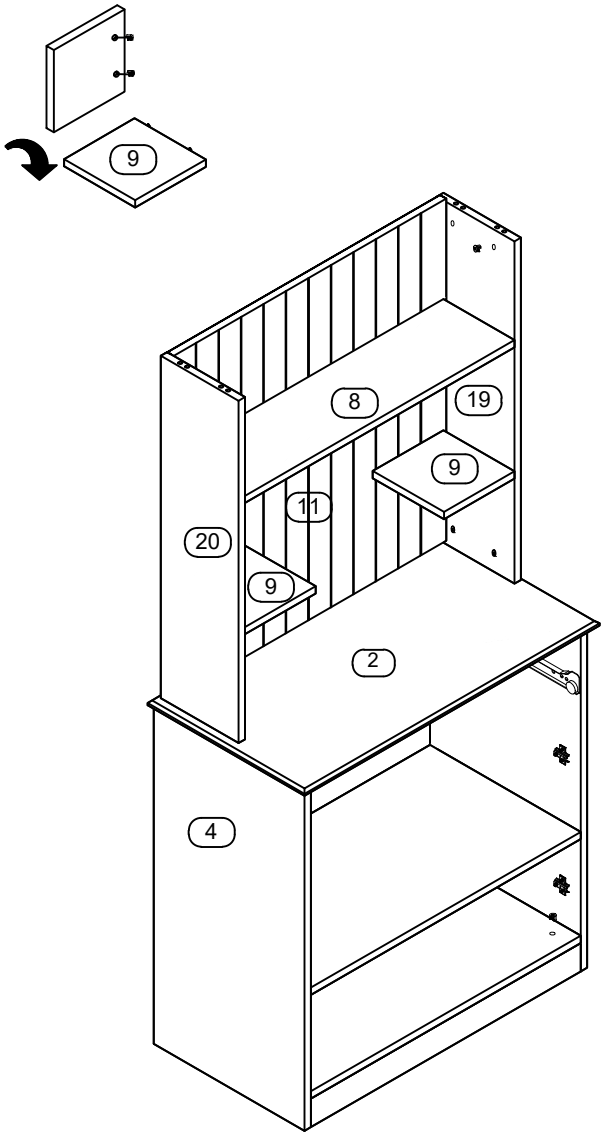


Step 11: Place and secure the top panel, number 12.

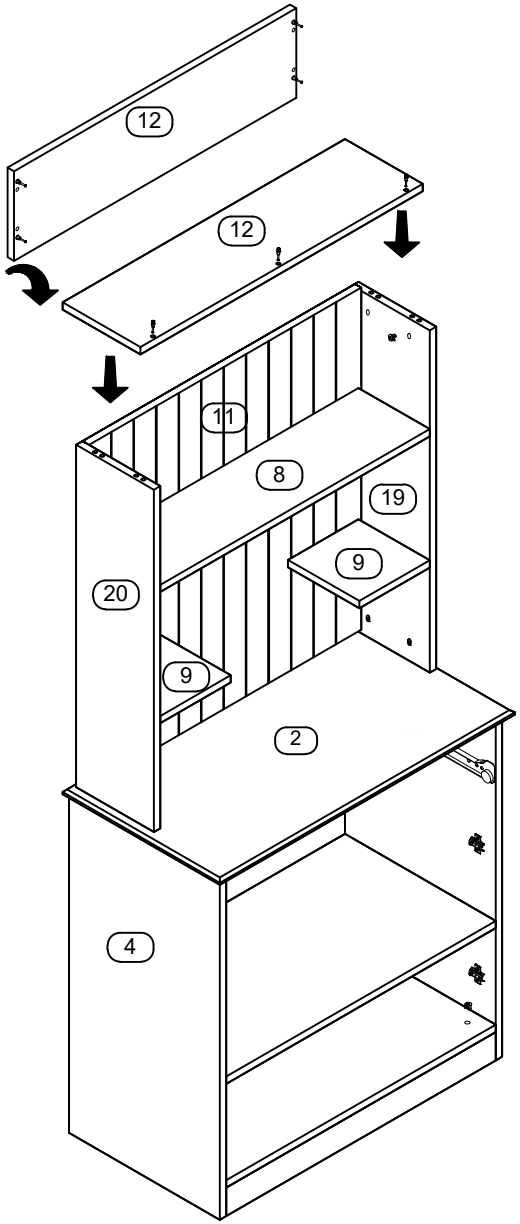

Step 12: Place and secure panel number 13.

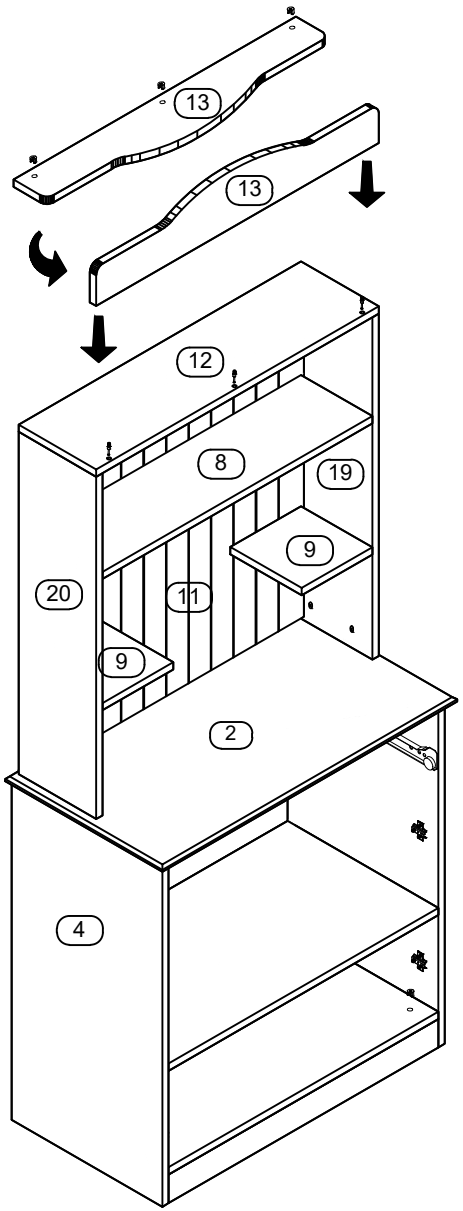


Step 13: Place the hinges onto the covers as shown in the diagram, ensuring they sit securely on the hinge bases.

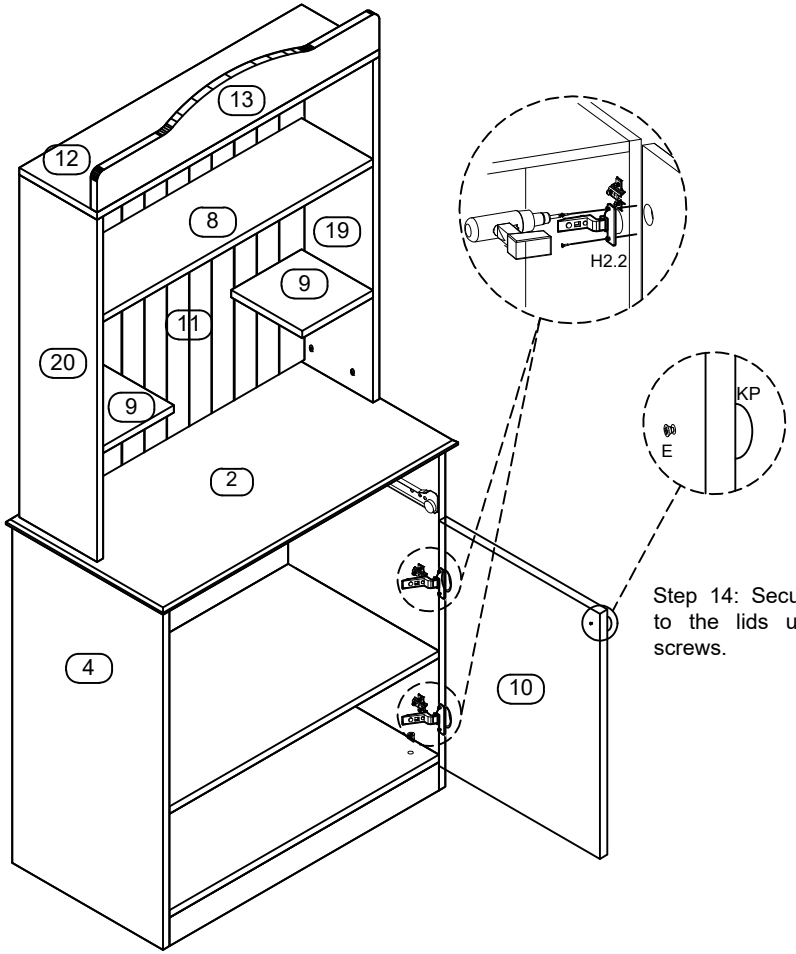

Step 14: Secure the handles to the lids using chipboard screws.

Step 15: Complete the installation and securing of your furniture drawer as shown in the drawing.

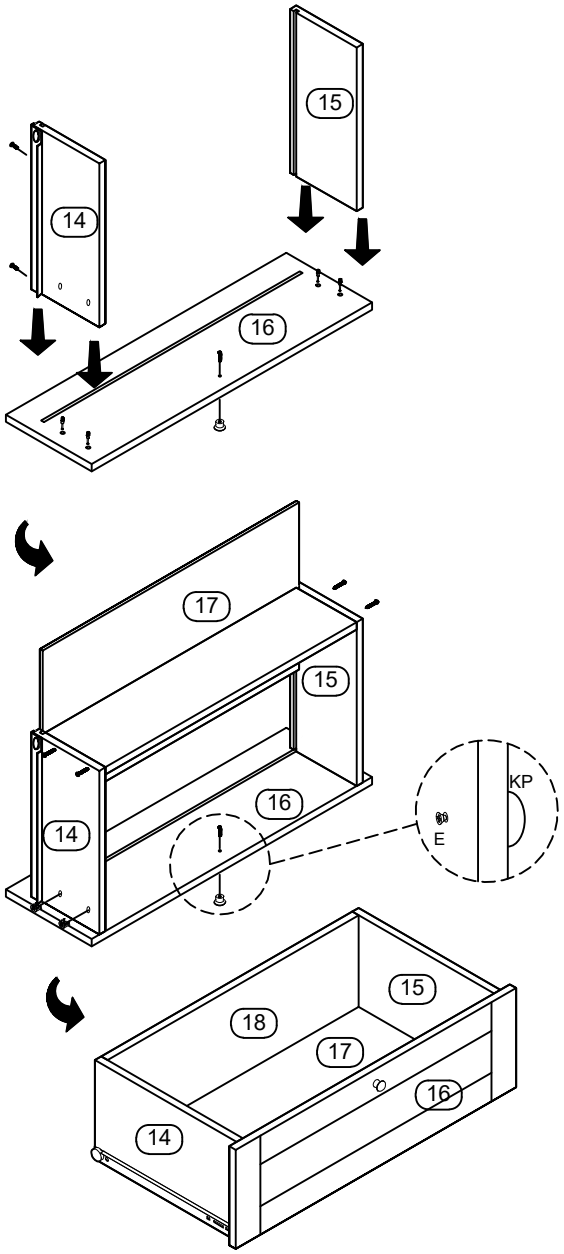

This is what your wardrobe will look like once the installation is complete. We hope you enjoy using it.

